




SPIN TRAINER

REMOTE CONTROL

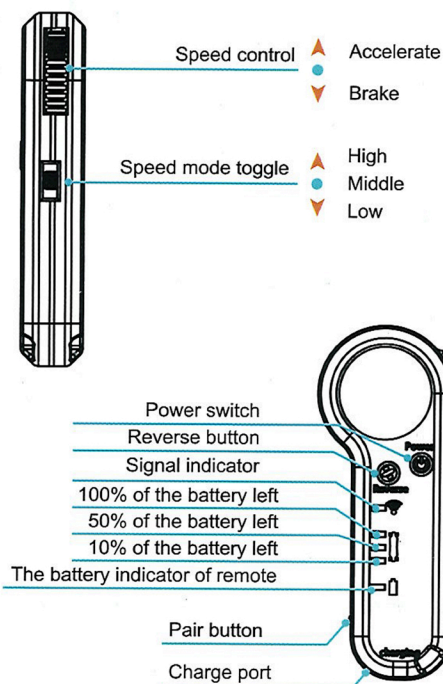

MODES


0lb to 60lb - mode set to low


60lb to 120lb - mode set to medium


120lb to 180lb - mode set to high


These are recommended mode adjustments. Modes can be changed disregarding the weight only under the supervision of a professional.


- 1) TURN SPINNER DEVICE ON
- 2) TURN THE REMOTE CONTROL ON
- 3) SET DESIRED MODE
- 4) TEST DEVICE SPINNING
- 5) DEVICE READY TO USE

 **Safety Gear:** we recommend that you wear full safety gear while riding. Please wear a suitable skateboard helmet, elbow pads, knee pads, and gloves.


 **Keep fingers, hairs, and clothing away from motors, wheels and moving parts.**

 **Do not open or tamper with electronics housing.** Electricshock is possible and this also voids the warranty.

 **Wear shoes:** Flipflops or similar loose footwear are not suitable for riding wear.

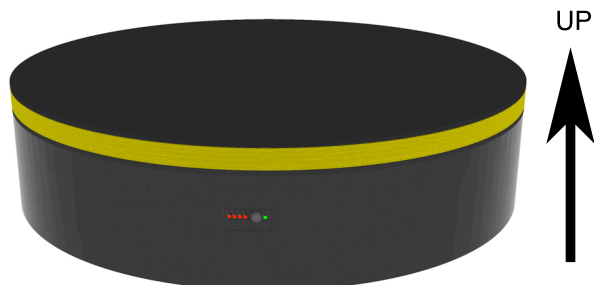

SPINNER DEVICE

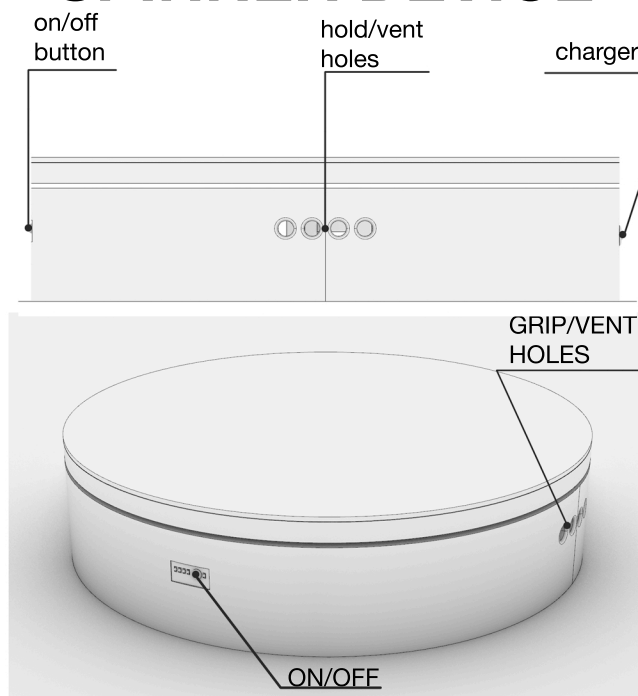

WARNING

THIS PRODUCT IS NOT A TOY. USE ONLY FOR TRAINING PURPOSES. USERS UNDER THE AGE OF 21 REQUIRE ADULT SUPERVISION. THIS MACHINE USES HIGH-SPEED ROTATING MOTION AND CAN LEAD TO SERIOUS INJURY. DO NOT LEAVE THIS MACHINE IN THE SUN, THE PLASTIC DOESN'T WITHSTAND HIGH TEMPERATURES. DO NOT DROP OR THROW THE MACHINE. THIS MACHINE RUNS ON LITHIUM BATTERY. MANUFACTURER IS NOT RESPONSIBLE FOR ANY INJURIES OBTAINED .

- REQUIRES ADULT SUPERVISION
- DO NOT LEAVE UNDER OPEN SUN OR IN HOT CAR
- DO NOT DROP OR THROW
- MAXIMUM WEIGHT LOAD IS 180LB
- NOT A TOY